



MODEL	P	W	F	T	H	A
ZEFIR 100	+	+	-	-	-	-
ZEFIR 100 B	-	-	-	-	-	-
ZEFIR 100 T	-	-	-	+	-	-
ZEFIR 100 FT	-	-	+	+	-	-
ZEFIR 100 HT	-	-	-	+	+	-
ZEFIR 1012 B	-	-	-	-	-	-
ZEFIR 120	+	+	-	-	-	-
ZEFIR 120 B	-	-	-	-	-	-
ZEFIR 120 T	-	-	-	+	-	-
ZEFIR 120 FT	-	-	+	+	-	-
ZEFIR 120 HT	-	-	-	+	+	-
ZEFIR 150	+	+	-	-	-	-
ZEFIR 150 B	-	-	-	-	-	-

**P** - pull cord switch, **W** - cable with a plug,  
**F** - photocell, **T** - time switch,  
**H** - adjustable humidity sensor, **A** - automatic louver

Type	Size [mm]					Weight [kg]	V	Hz	W	Reinforcement	Air flow [m³/h]	Class	Protection	Acoustical pressure	rev. [1/min]
	A	B	C	D	E										
<b>ZEFIR 100</b>	150	150	60	100	25	0,61	230	50	19	flux	100	II	IP - X4	39 dB (A)	2550
<b>ZEFIR 1012</b>	150	150	60	100	25	0,59	12	50	19	flux	100	II	IP - X4	39 dB (A)	2550
<b>ZEFIR 120</b>	170	170	60	120	25	0,70	230	50	20	flux	150	II	IP - X4	42 dB (A)	2360
<b>ZEFIR 150</b>	180	180	60	150	25	0,75	230	50	22	flux	200	II	IP - X4	45 dB (A)	1850

